

Installation Instructions Menos[™] II

IMPORTANT

- THE URINAL MUST BE INSTALLED IN ACCORDANCE WITH THE AS/NZS 3500.2 PLUMBING REQUIREMENTS.
- ENSURE THAT ALL DRAINPIPES ARE WELL CLEANED AND ARE FREE FROM BLOCKAGES.
- THE UNDILUTED DISCHARGE FROM A WATERLESS URINAL SHALL NOT BE TRANSPORTED THROUGH COPPER OR COPPER ALLOY PIPEWORK
- **PLEASE GIVE THE ENCLOSED ENVELOPE WITH THE CLEANING/MAINTENANCE INSTRUCTIONS AND WARRANTY DETAILS TO THE CUSTOMER**

Included in the box:

- Mounting Bracket
- Screws + Plugs

Included in the plastic bag:



- Drain Connector A,B,C,D and E (see drawing below)
- D-Valve with Service Key

Installation of URIMAT

1. Drill two holes (10mm) for mounting bracket; 880mm from the floor, 260mm apart.
2. Mount the bracket using the appropriate screws & plugs for the wall. Ensure that the bracket is level.
3. Cut 50mm sewer pipe to size
4. Glue the 50mm coupling (E) to the sewer pipe. Make sure the end of the 50mm coupling (E) is max 40mm from wall. (see drawing below)
5. Hang the urinal on to the wall-brackets and connect with Parts A,B,C,D and E included in the delivery. Part C (40mm pipe) cut to size
6. Seal outer edges of urinal to the wall with silicone seal.
7. Insert D-Valve clockwise using the service key enclosed.



Menos[™] II

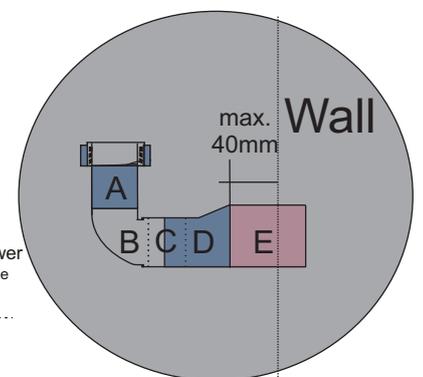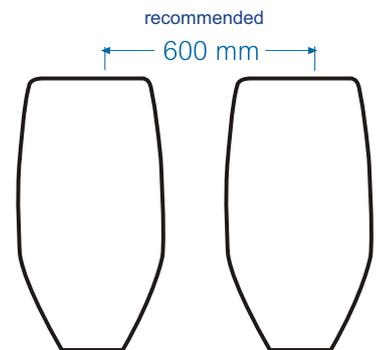

- A: 40X1.50IN connector with seal
- B: Bend 40 x 87D DWV
- C: 40mm Pipe (cut to size)
- D: Taper DWV Level Invert 50 x 40
- E: 50mm DWV Coupling

