

Installation Instructions Menos[™] II

IMPORTANT

THE URINAL MUST BE INSTALLED IN ACCORDANCE WITH THE AS/NZS 3500.2 PLUMBING REQUIREMENTS ENSURE THAT ALL DRAINPIPES ARE WELL CLEANED AND ARE FREE FROM BLOCKAGES. THE UNDILUTED DISCHARGE FROM A WATERLESS URINAL SHALL NOT BE TRANSPORTED THROUGH COPPER OR COPPER ALLOY PIPEWORK

Included in the urinal box:


Urinal, Mounting Bracket, Screws + Plugs and Installation Kit (plastic bag)

Included in the plastic bag:

1. Straight lining with nut (white)
2. Black sealing rubber
3. Straight pipe 40mm
4. 90 Bend pipe 40mm and D-Valve with Service Key



Menos[™] II

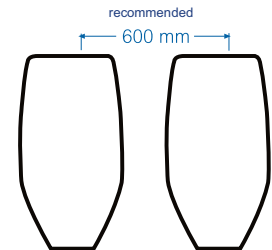

Installation of Menos II:

1. Drill two holes (10mm) for mounting bracket; 880mm from the floor, 260mm apart.
2. Mount the bracket using the appropriate screws & plugs for the wall. Ensure that the bracket is level.
3. Cut 50mm sewer pipe to size. (allow for 20mm overhang)
4. Push the black sealing rubber (2) into the 50mm sewer pipe.
5. Hang the urinal on to the wall-brackets and connect with Parts 1- 4.
6. Add some grease to the inside of the black sealing rubber and push the straight pipe (3) into it.
7. Connect the straight lining with nut (1) to the urinal outlet thread, make sure you place the black washer to the correct position before tightening the nut.
8. Push the 90 bend pipe (4) to the straight lining with nut (1).
9. Connect (pull&push) the straight pipe (3) onto the 90 bend pipe (4). If necessary cut the straight pipe (3) to size so it fits nicely into black rubber seal (2).
10. Test if the connection between the sewer pipe to the urinal is tight.
11. Seal outer edges of urinal to the wall with silicone seal.
12. Insert D-Valve clockwise using the service key enclosed.

