

# Installation Instructions Pilbara<sup>TM</sup>

## IMPORTANT



- THE URINAL MUST BE INSTALLED IN ACCORDANCE WITH THE AS/NZS 3500.2 PLUMBING REQUIREMENTS
- ENSURE THAT ALL DRAINPIPIPES ARE WELL CLEANED AND ARE FREE FROM BLOCKAGES.
- THE UNDILUTED DISCHARGE FROM A WATERLESS URINAL SHALL NOT BE TRANSPORTED THROUGH COPPER OR COPPER ALLOY PIPEWORK
- PLEASE GIVE THE CLEANING/MAINTENANCE INSTRUCTIONS TO THE CUSTOMER



**Pilbara**

### Installation of Pilbara Waterless Urinal

1. Drill two holes (8mm) for mounting bracket, 1000mm from the floor, 225mm apart. Make sure the bracket has been centered and is level.
2. Install the bracket using the appropriate screws & plugs.
3. Cut 50mm sewer (PVC) pipe to size. Glue the 50mm coupling (E) to the sewer pipe. Make sure the end of the 50mm coupling (E) is max 40mm from wall. (see drawing below)
4. Hang the urinal on to the wall-brackets, making sure the urinal has been centered and connect with Parts A,B,C,D and E (included in the delivery). Part C (40mm pipe) cut to size.
5. Mark the holes at the bottom unscrew A, remove the urinal and drill the holes (10mm). Install the wall bolt.
6. Reinstall the urinal.

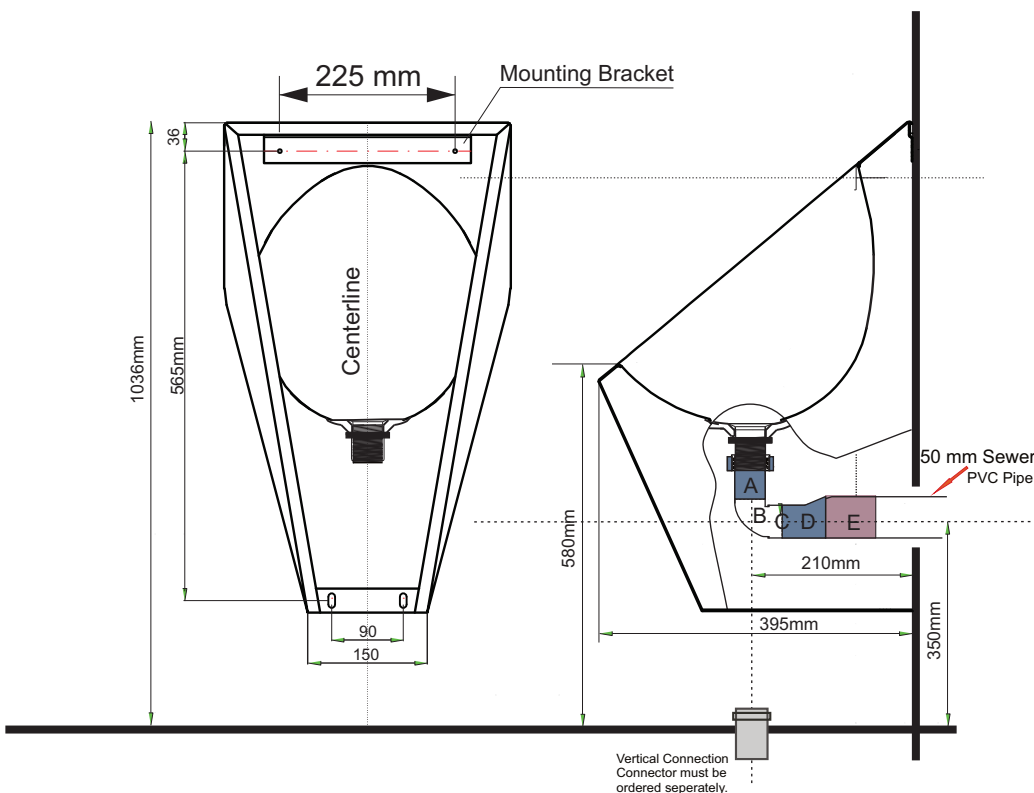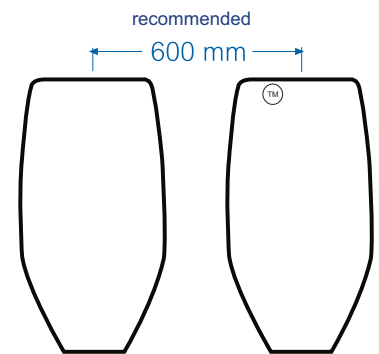

### Following parts are included

- Mounting Bracket
- Screws + Plugs. Wall Bolt
  - A: 40X1.50IN connecter with seal
  - B: Bend 40 x 87D DWV
  - C: 40mm PVC Pipe (cut to size)
  - D: Taper DWV Level Invert 50 x 40
  - E: 50mm DWV Coupling

