


Maintenance Instruction for Urinals with D-Valve

Cleaning Instruction

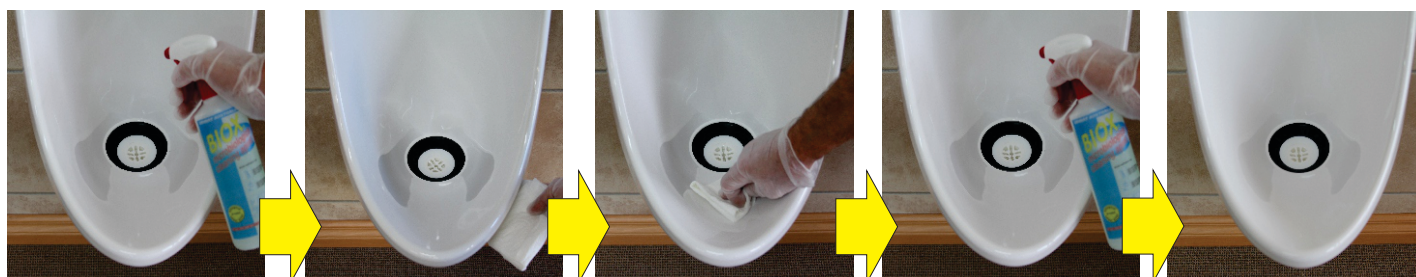

Spray urinal inside and outside with Biox cleaner


Then wipe with clean paper starting outside

Then clean the inside

Spray urinal inside with Biox cleaner and leave.

Finished!

Changing D-Valve

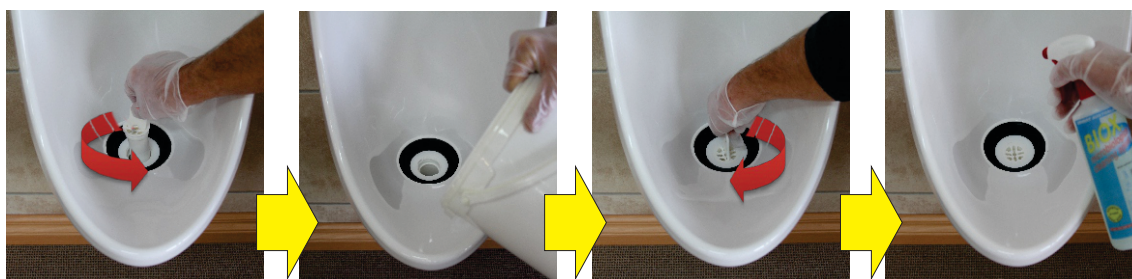

Remove D-Valve with Service Key counter clockwise and dispose

Flush the drain with approximately 10L of water

Install the the new D-Valve clockwise using the Service Key

Spray urinal with Biox cleaner. Finished!

D-Valve this needs to be changed on average between **2-4 times a year** depending on usage.

Base unit Adapter which the D-Valve sits in should be changed on average every 2-3 years depending on usage.

The manufacturer recommends the use of BIOX cleaning agent which is a powerful microbiological cleaning product which has no harmful chemicals and is safe to use for our ecological systems and is neither toxic nor allergenic. BIOX will eliminate the undesirable odour and provide a constant freshness in the toilet and sanitary areas.

D-Valve Order # **D001**

Base Unit Adapter Order # **D002/3**

Biox Cleaning Agent 1L Order # **80.001**

Biox Cleaning Agent 10L Order # **80.006**

Do not use any type of corrosive product that can damage the urinal or the valve.

In order to get the best from your waterless urinal it is important that you follow the maintenance instruction above.